


One Blue Hill Plaza, Sixteenth Floor, PO Box 1546
Pearl River, NY 10965
1-800-PC-AMERICA, 1-800-722-6374
(Voice) 845-920-0800 (Fax) 845-920-0880


Bematech LR2000 Printer Installation Guide for Windows 7 (32/64 bit) and Windows 8 (32/64 bit)




This document provides step-by-step instructions for setting up your Bematech LR2000 Thermal Printer for USB or Serial connection.


Connecting the Hardware

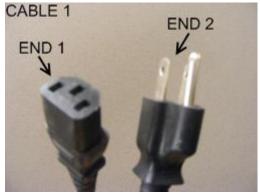

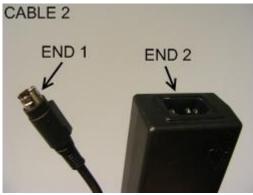

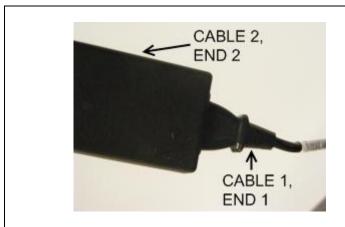

- 1. Insert end 1 of cable 1 into end 2 of cable 2.
- 2. Insert **end 2** of **cable 1** into a power outlet.

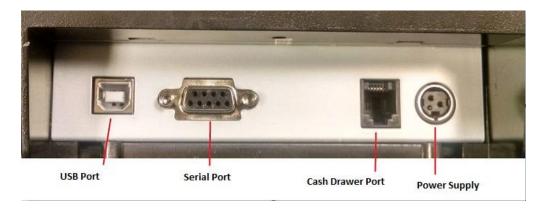

Connect the serial or usb cable to the appropriate port on the printer.

Installing the driver

Note: The printer MUST be disconnected from the computer during the driver installation for 32 bit computers. Only have it connected if the computer is running Windows 7 64 bit or Windows 8 64 bit.


Before you begin please download and extract the installation files for the appropriate OS:


For 32 bit OS:


http://download2.pcamerica.com/drivers/7/Manufacturer/Bematech/LR2000 Printer x86.zip


For 64 bit OS:

http://download2.pcamerica.com/drivers/7/Manufacturer/Bematech/LR2000 Printer x64.zip

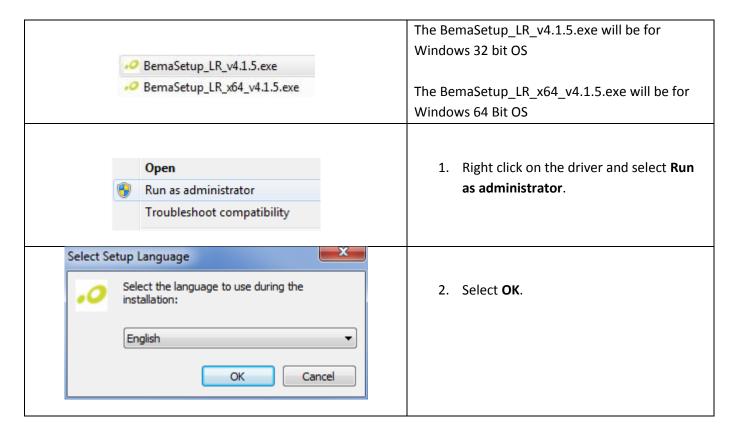


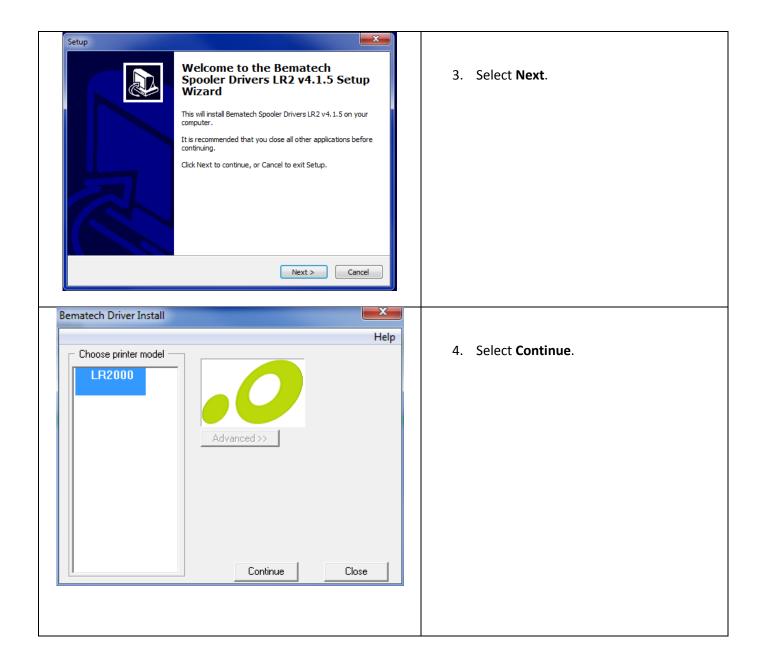

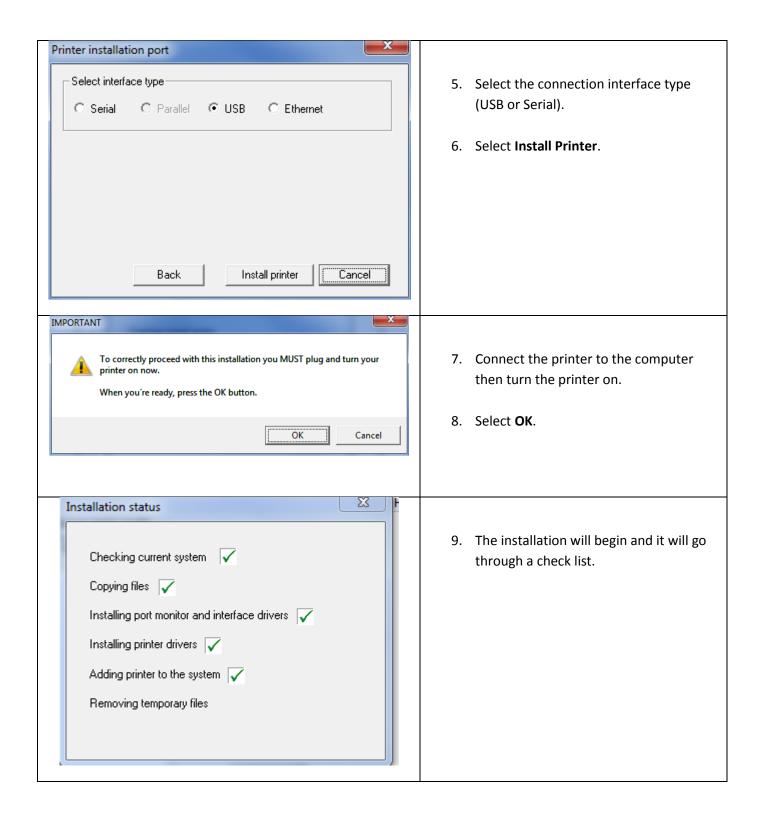

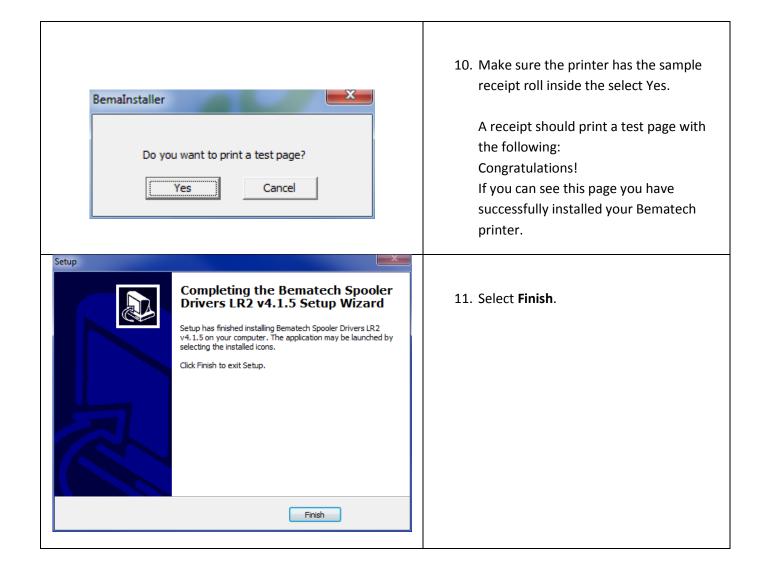

Configuration in CRE/RPE

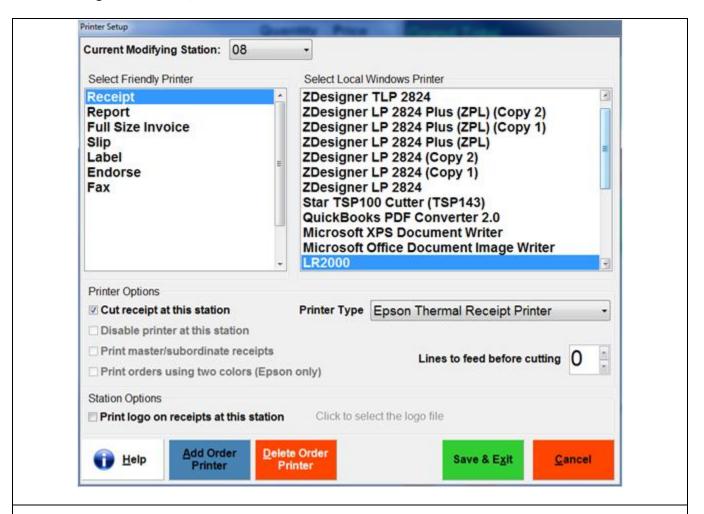


- 1. Start the RPE/CRE program.
- 2. Select the **Options/Manager** and enter your password (where applicable).
- 3. Select [4] Setup | [L] Friendly Printer Setup and re-enter your password if necessary.
- 4. Select Receipt in the Select Friendly Printer list on the left.
- 5. Select the **LR2000** in the **Select local Windows printer** list on the right.
- 6. Select **Epson Thermal Receipt Printer** as the Printer Type.

Select Save & Exit.

Cash Drawer Configuration



- 1. Select the Manager or Options button.
- 2. Enter the administrator password (default: admin) where applicable.
- 3. Select **Setup** then, **Setup Screen**.

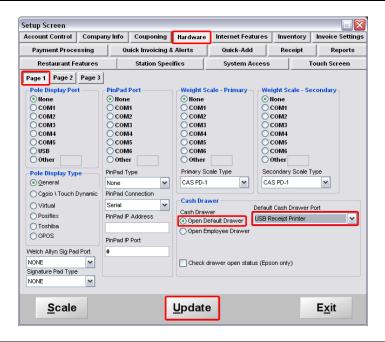

- 4. Select the Hardware tab.
- Select Page1.
- 6. Under **Cash Drawer** select the radio button that says **Open Default Drawer**.
- 7. Under **Default Cash Drawer Port** select the appropriate port that your receipt printer is connected to (**USB Receipt Printer**).


Note: If the port that your printer is connected to is selected and the cash drawer is not opening, try setting the port as the **USB Receipt Printer**.

8. Select **Update**.

Printing Barcodes on Receipts



- 1. Select the Manager or Options button.
- 2. Enter the administrator password (default: admin) where applicable.
- 3. Select **Setup** then, **Setup Screen**.

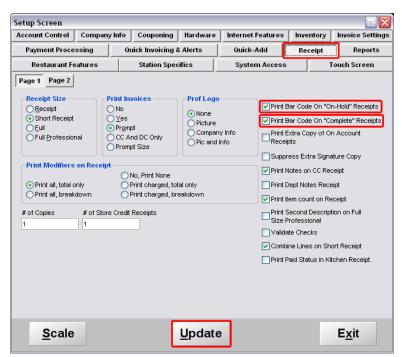

- 4. Select the **Receipt** tab.
- 5. Check Print Bar Code On "On-Hold" Receipts.
- 6. Check Print Bar Code On "Complete" Receipts.
- 7. Select **Update** to save your changes.