


*One Blue Hill Plaza, 16th Floor, PO Box 1546
Pearl River, NY 10965
1-800-PC-AMERICA, 1-800-722-6374
(Voice) 845-920-0800 (Fax) 845-920-0880*

Honeywell 3800G Barcode Scanner



This document will cover installing a Honeywell 3800G barcode scanner to your computer via USB as well as the necessary configuration steps.

Installing the Honeywell 3800G via USB

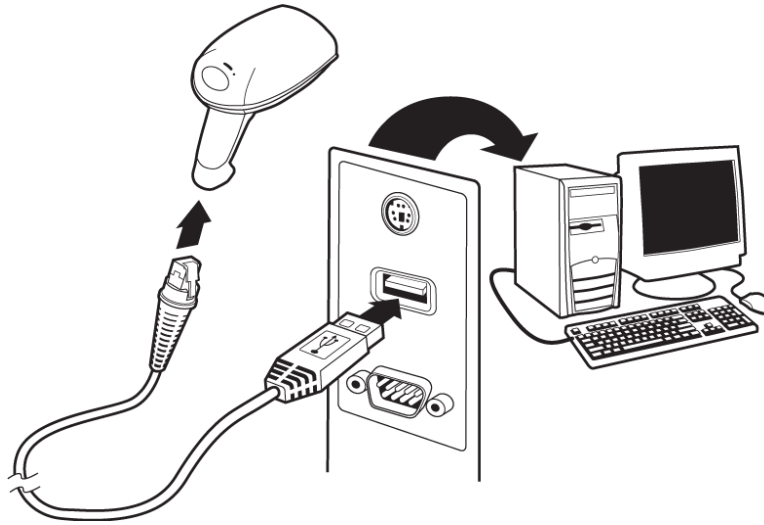

1. Connect the RJ45 end of the cable into the bottom of the scanner and then, plug the USB end into an available USB port on your computer.



USB Keyboard (PC)

2. Scan this barcode to put the scanner in USB mode with keyboard emulation.



Add CR Suffix

3. Scan this barcode to add a Carriage Return at the end of the scan.

Note: Barcodes scanned in notepad should have the following format (including the cursor on the next line):

```
123456789123
```

```
|
```

Other Options

The following bar codes will allow you to use the reader in:

- Manual Trigger mode (need to press the trigger to read)
- Automatic Trigger mode (the beam is always on)
- Presentation mode (the reader is activated when it “sees” a bar code).



Manual Trigger
(Default)



Automatic Trigger



Presentation Mode