

**Heartland**

**pcAmerica**

---

*One Blue Hill Plaza, 16<sup>th</sup> Floor, PO Box 1546*

*Pearl River, NY 10965*

*1-800-PC-AMERICA, 1-800-722-6374*

*(Voice) 845-920-0800 (Fax) 845-920-0880*


## **Setting up the NCR 7875 Weight Scale**




This document contains step-by-step instructions for setting up the NCR 7875 to work with CRE.

## NCR 7875 - Hardware Configuration

To set up the NCR 7875 for operation, follow these steps.

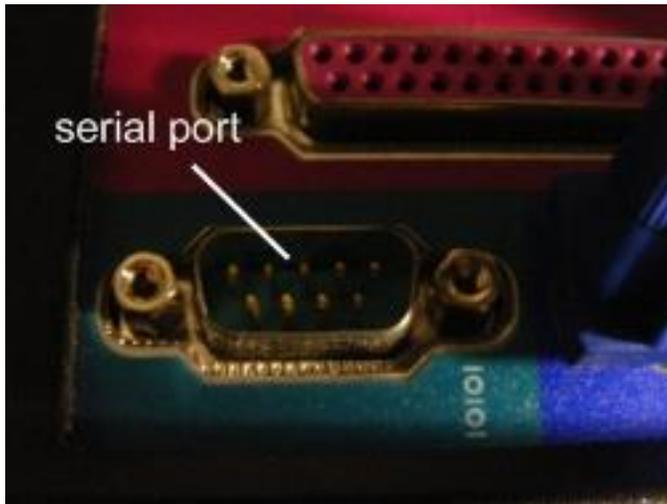

1. Plug the appropriate ends of the power supply cable into **PORT 1** of the scanner/scale and a power outlet.
2. Plug the pole display into **PORT 2** of the scanner/scale.
3. Plug the appropriate ends of the remaining cable into **PORT 3** of the scanner/scale and a computer's serial port.
  - The computer should be powered off.


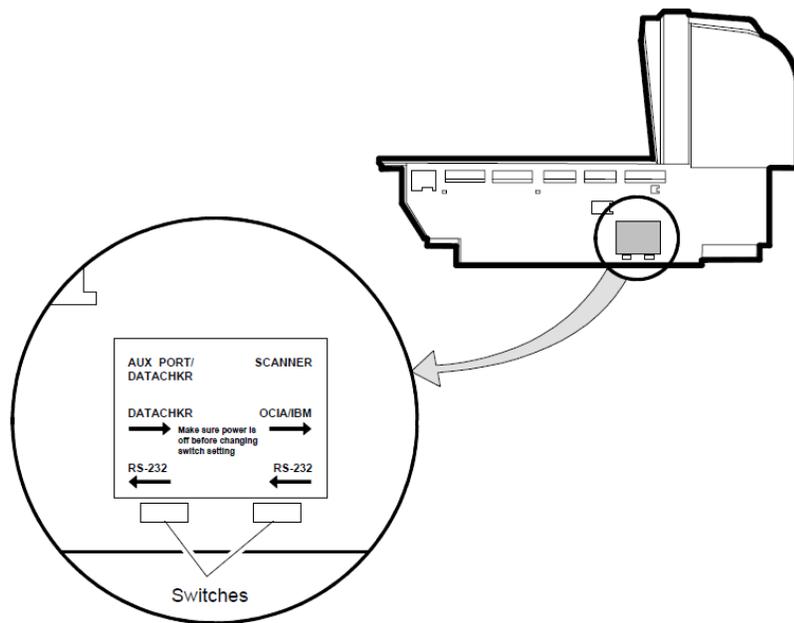


4. On the side of the scale make sure that the switch or switches are set to the RS-232 position.

## **NCR 7875 Configuration**

To configure the NCR 7875 to interpret data for CRE, please scan the following barcodes in order as they appear.


After making any of the following changes to the scale you will need to contact Weights and Measures to make sure the scale are certified and weighing items properly.

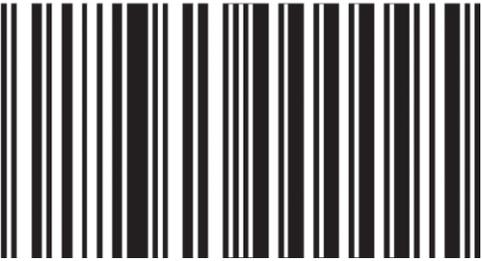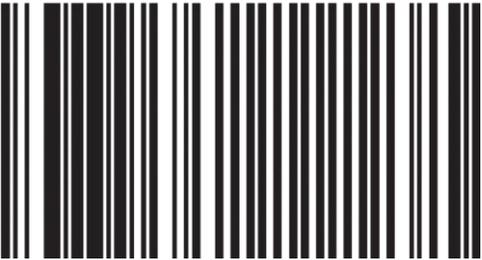1.	<p data-bbox="667 510 735 537">Reset</p> 
2.	<p data-bbox="667 911 748 938">Default</p> 
3.	<p data-bbox="667 1318 846 1346">Save and Reset</p> 


If the scanner is still not behaving correctly please see the **NCR 7875 Advanced** document located at: <http://faq.pcamerica.com>

## Setting up the NCR 7875 to work with CRE


Once the NCR 7875 is setup, connected to the computer, and powered on, you can set up CRE to use it as a barcode scanner and a weight scale. To do so, start your computer, start CRE, select **Manager**, provide the requested credentials, and follow these steps.

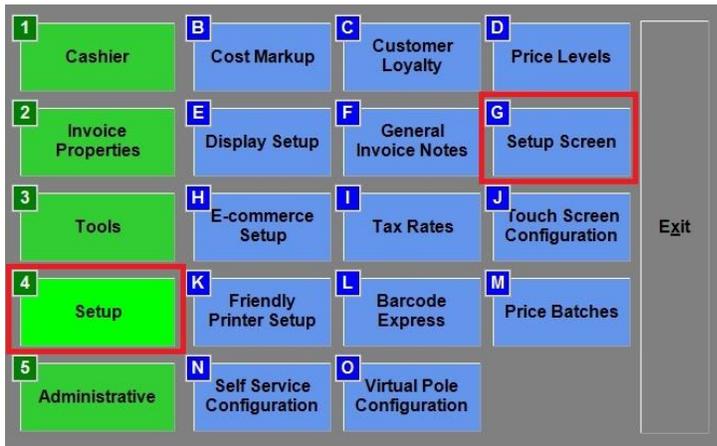


1. Select **Setup** and then **Setup Screen**.

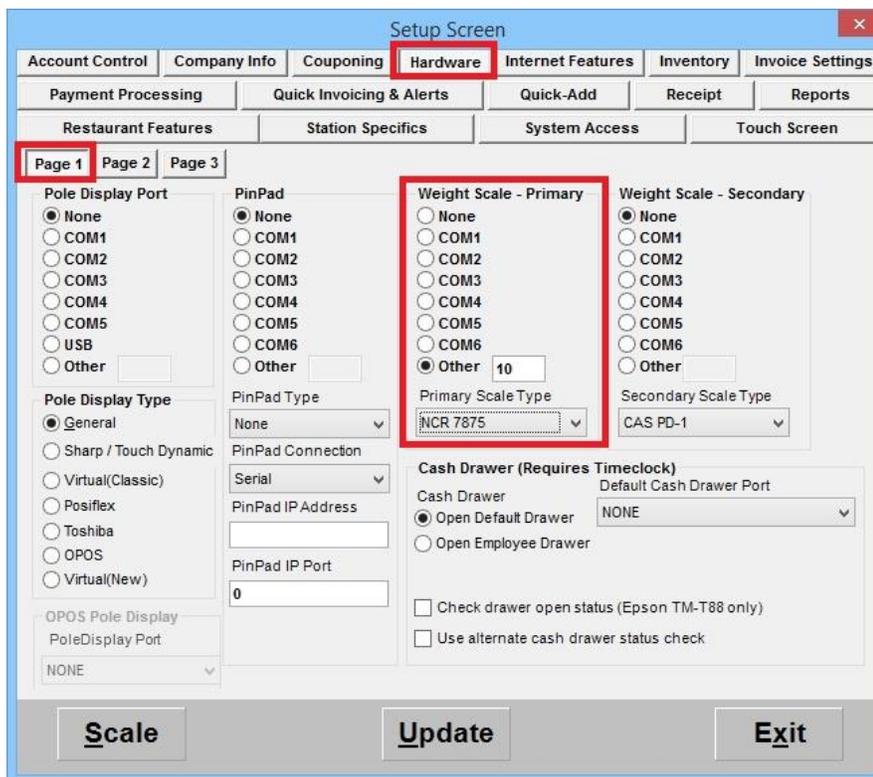


2. Select the **Hardware** tab.
3. Select the COM port that the scanner/scale is connected to. Many systems have labels on the ports that contain this information. If yours does not, select **COM 1**. You may need to select other COM ports later if CRE does not find the scale.
- Enter the optional tare amount. Leave at 0 if you do not want to use a tare.
4. Select **NCR 7875** for "Primary Scale Type".

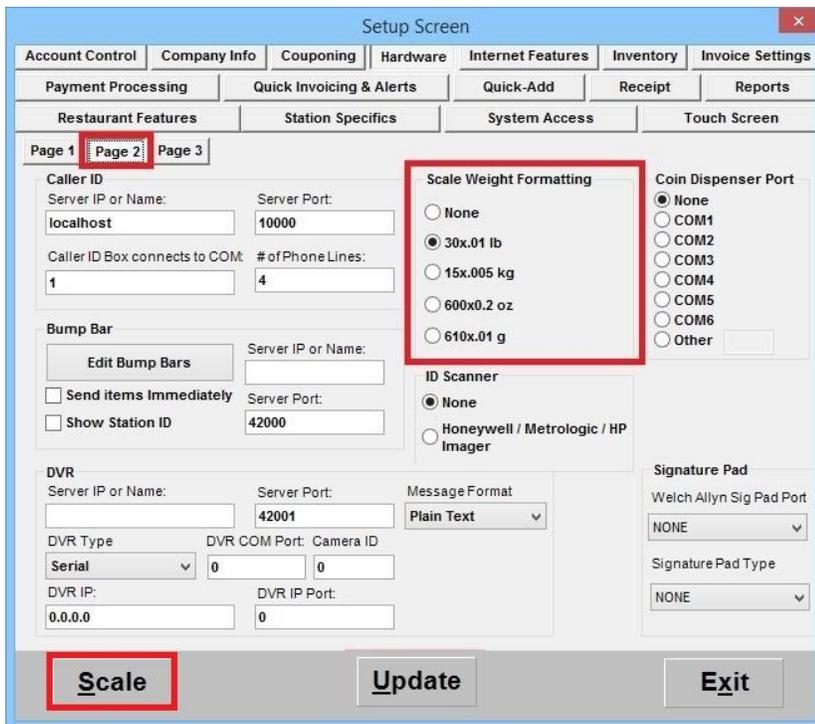

5. Select **Page 2**.
6. Select the radio button next to **30x.01 lb** under “Scale Weight Formatting”.
7. Select **Scale**.

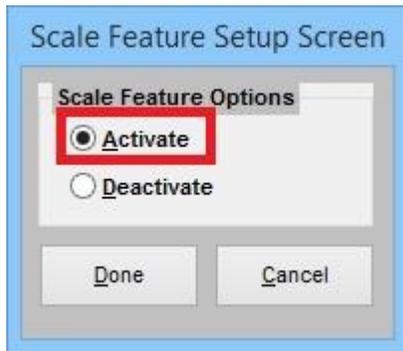

 8. Activate the scale feature and select **Done**.



9. Select **Update**.

You should now be able to scan barcodes and weigh items into CRE. Note that other programs will not be able to accept input from the scanner/scale without having been designed to do so.

If the scanner is still not behaving correctly please see the **NCR 7875 Advanced** document located at: <http://faq.pcamerica.com>