

*One Blue Hill Plaza, 16th Floor, PO Box 1546
Pearl River, NY 10965
1-800-PC-AMERICA, 1-800-722-6374
(Voice) 845-920-0800 (Fax) 845-920-0880*

POS-X XP2200S Pole Display Installation



No Drivers are needed to install any of the POS-X pole displays. The pole display should have both a Com and a USB Connection. The USB Connection is used for Power. All you have to do is match the COM port in our program to what the pole display is attached to and it works.

NOTE: There is also a Power switch under the display.



1. Turn the power switch located on the bottom of the display to the on position.

The screenshot shows the 'Setup Screen' window with the following settings:

- Tab: **Hardware**
- Page: **Page 1**
- Pole Display Port: **COM1** (selected)
- Pole Display Type: **General** (selected)
- PinPad Port: **None** (selected)
- PinPad Connection: **USB** (selected)
- PinPad IP Address: [Empty]
- PinPad IP Port: **0**
- Weight Scale - Primary: **None** (selected)
- Primary Scale Type: **CAS PD-1 or PD-2** (selected)
- Weight Scale - Secondary: **None** (selected)
- Secondary Scale Type: **CAS PD-1** (selected)
- Cash Drawer: **Open Default Drawer** (selected)
- Default Cash Drawer Port: **NONE** (selected)
- Check drawer open status (Epson TM-T88 only):

Buttons at the bottom: **Scale**, **Update** (highlighted), **Exit**.

2. Start the RPE/CRE program.
3. Select the **Options/Manager** and enter your password (where applicable).
4. Select **Setup** and then **Setup Screen**.
5. Select the **Hardware** tab and then **Page1**.
6. Under **Pole Display Port** select the port that the Pole display is attached to (e.g. COM1).
7. Under **Pole Display Type** select **General**.
8. Select **Update** to save your changes.