

# Setting Up the Weigh-Tronix 6712oz Scale



This document contains step-by-step instructions for setting up the Weigh-Tronix 6712 (oz) scale to work with CRE.

## **Setting up the Weigh-Tronix 6712 (oz) scale**


After making any of the following changes to the scale you will need to contact Weights and Measures to make sure the scale is certified and weighing items properly.

To set up the Weigh-Tronix 6712 (oz) scale for operation, follow these steps.


- 1. Remove Plastic Plug, Press button. Until (diag displays on the scale)**
- 2. Press Zero Until (Conf Displays)**
- 3. Press Test (Filt)**
- 4. Press Zero (Baud)**
- 5. Press Test (Current Baud Rate)**
- 6. Press Zero to change Baud Rate (Needs to show 96-E)**
- 7. Press Test to confirm Selections**
- 8. Press Zero Until (Done displays)**
- 9. Press Test again**
- 10. Restart Scale (pull power)**

## Setting up the Weigh-Tronix 6712 (oz) scale to work with CRE

Once the Weigh-Tronix 6712 (oz) scale is setup, connected to the computer, and powered on, you can set up CRE to use it as a weight scale. To do so, start your computer, start CRE, select **Manager**, provide the requested credentials, and follow these steps.

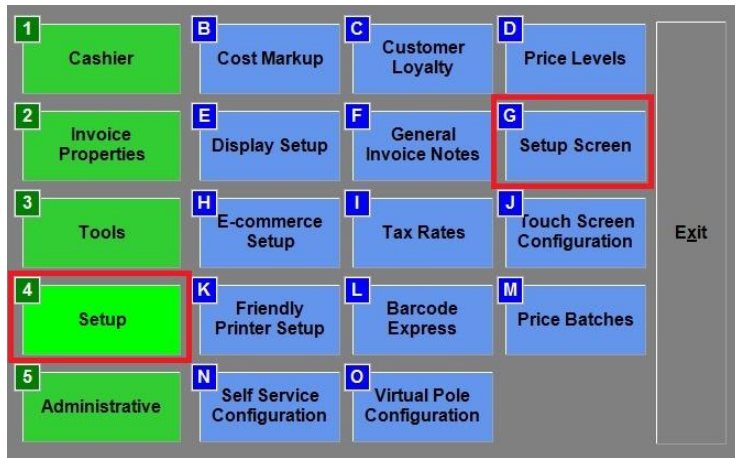

1. Select **Setup** and then **Setup Screen**.

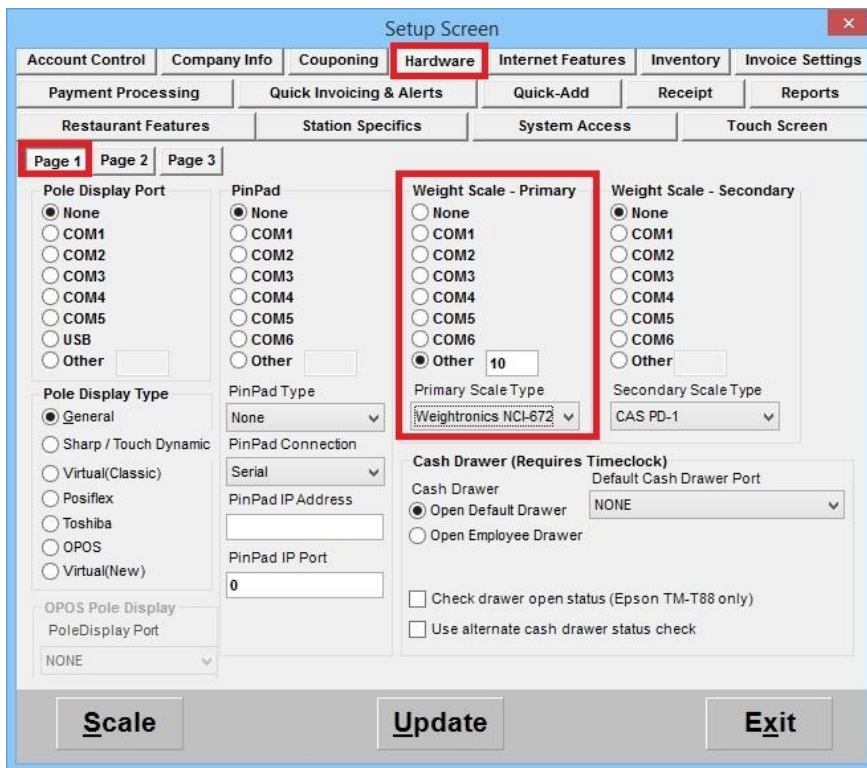

2. Select the **Hardware** tab.
3. Select the COM port that the scale is connected to. Many systems have labels on the ports that contain this information. If yours does not, select **COM 1**. You may need to select other COM ports later if CRE does not find the scale.
4. Select **Weightronics NCI-6720** for **Primary Scale Type**.

Setup Screen

Account Control | Company Info | Couponing | Hardware | Internet Features | Inventory | Invoice Settings

Payment Processing | Quick Invoicing & Alerts | Quick-Add | Receipt | Reports

Restaurant Features | Station Specifics | System Access | Touch Screen

Page 1 | **Page 2** | Page 3

Caller ID  
 Server IP or Name: localhost | Server Port: 10000  
 Caller ID Box connects to COM: 1 | # of Phone Lines: 4

Bump Bar  
 Edit Bump Bars | Server IP or Name: |  
 Send items Immediately | Server Port: 42000  
 Show Station ID

DVR  
 Server IP or Name: | Server Port: 42001 | Message Format: Plain Text  
 DVR Type: Serial | DVR COM Port: 0 | Camera ID: 0  
 DVR IP: 0.0.0.0 | DVR IP Port: 0

Scale Weight Formatting  
 None  
 30x.01 lb  
 15x.005 kg  
 600x0.2 oz  
 610x.01 g

Coin Dispenser Port  
 None  
 COM1  
 COM2  
 COM3  
 COM4  
 COM5  
 COM6  
 Other

ID Scanner  
 None  
 Honeywell / Metrologic / HP Imager

Signature Pad  
 Welch Allyn Sig Pad Port: NONE  
 Signature Pad Type: NONE

**Scale** | Update | Exit

1. Select **Page 2**.
2. Select the radio button next to **600x0.2 oz** under **Scale Weight Formatting**.
3. Select **Scale**.

Scale Feature Setup Screen

Scale Feature Options  
 **Activate**  
 Deactivate

Done | Cancel

4. Activate the scale feature by selecting **Activate**.
5. Select **Done**.

**Update**

6. Select **Update**.

You should now be able to weigh items into CRE.